



INSTRUCTIONS

FIELD APPLIED EXTENSION JAMB INSTALLATION APPLICATION FOR WHEN HORIZONTALLY MULLED WINDOW HEIGHTS EXCEED 84"

THE EXTENSION JAMB WILL BE SHIPPED INSTALLED INTO THE EXTENSION JAMB RECEIVER, AND WILL BE CUT AND NOTCHED.

STEP A: ATTACH HEADER EXTENSION JAMB AND RECEIVER AS ONE UNIT TO WINDOW MAIN FRAME. FASTEN WITH 3/8" STAINLESS STEEL STAPLES. STAPLES MUST PENETRATE RECEIVER FLANGE AND WINDOW MAIN FRAME. SEE APPLICATION INSTRUCTION (OVER).

STEP B: FOR JAMBS AND/OR SILLS – SAME NOTE AS ABOVE APPLIES.

NOTE: FOR WINDOW UNITS THAT HAVE FOUR SIDED EXTENSION JAMBS THE SILL EXTENSION JAMB MUST BE ASSEMBLED PRIOR TO JAMB EXTENSION JAMBS.

(OVER)